

OPERATING INSTRUCTION

Code pairing:

Connect the receiver to the light and led driver, and then supply power to led driver. Press and hold the K button on the sender for 1 second within 10 seconds. If the light flashes quickly 2 times, Code pairing is succeeded.

Code clearing:

First disconnect the power supply and wait for about 10 seconds, then supply power to LED driver again, Press and hold the K key on the Sender for 6 seconds within 10 seconds, the light flashes 5 times quickly, Code Clearing is succeeded.

One Sender to Max 5pcs Receiver
One Receiver to Multi Sender (No quantity Limit)
(Sender+ Receiver need to code pairing one by one).

Function of K key button

LZ5B-A0-P1

Short press the K key to switch the function in the touch mode, and it will be indicated by the number of D4 flashes

Mode 1: Touch on and off, D4 flashes one time.

Mode 2: Short touch to turn on and off, long touch to dim, D4 flashes twice.

LZ5B-A0-P2

Short press the K key to switch between three modes (Hand shaking/Door trigger), and it will be indicated by the number of D4 flashes


Mode 1: On and off of the hand shaking function, D4 flashes one time.

Mode 2: on and off and dimming of hand shaking function, D4 flashes twice.

Mode 3: Door trigger , D4 flashes three times.



CONNECTION

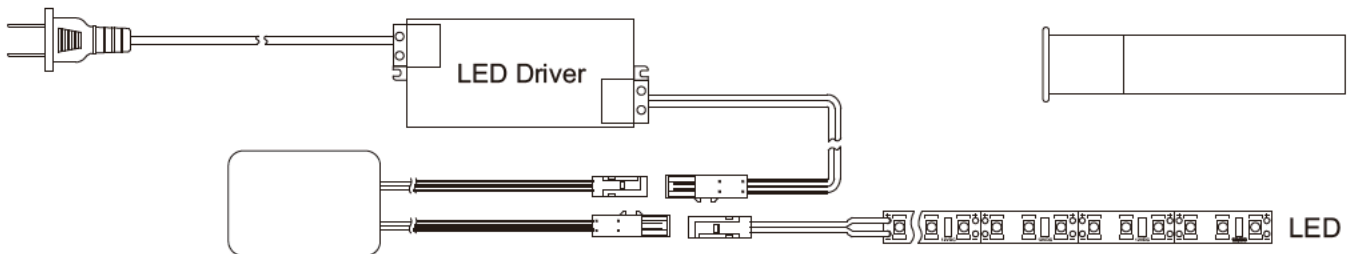

Output: Female plug (Cable with letter is positive)

Input: Male plug (Cable with letter is positive)